

## ImageMaster USB camera settings in Patterson EagleSoft:

Go to *File* → *Preference* → *X-ray* → *Video* →. In the pop-up, set (Capture Card) to 'Standard Windows Driver Model Device' and (Default Device) to 'ImageMaster USB' (or 'USB Video Device' is using Windows XP). Then Click on Save and Ok.

