

## **ImageMaster USB Camera Settings in AMCap:**

1. Create an AmCap folder for saving Images:

RIGHT click the mouse anywhere on the desktop  $\rightarrow$  New  $\rightarrow$  Folder and type "Camera Images" Then open AMCap and go to Capture  $\rightarrow$  Setup



Click on *General*  $\rightarrow$  *check* the two boxes shown in step number 3  $\rightarrow$  *Still Capture* – make sure all three boxes are checked as shown in step number 5 below  $\rightarrow$  OK

AMCap Setup	AMCap Setup
General Preview Video Capture Still Capture	General Preview Video Capture Still Capture
Application	Storage
Renember window position	Path:
Remember images controls (brightness, contrast, gamma, etc.)	C:/Users\Pental Show User\Pesktop\Camera Images Browse
Remainder camera controls (pan, tilt, zoom, exposure, etc.)	Quality: Elle format:
Enallie App Bar alpha-blending 70 👘 %	SS PEG V
Filter graph	Options
Add to Running Object Table	Capture stills from device Resolution
	Shable trigger bistable mode
	Capture stills to dipboard instead of files (ignore storage options)
3	Pay a sound every time a still is captured
<b>-</b>	
	5
	<b>J</b>
	6
OK Cancel	Cancel

2. Follow the steps below for adjusting the color in AmCap:

*Options* → Video Device → Video Capture Filter as shown in step one, next *Properties* → video Proc AMP → change the contrast to 5 and the white balance to 3800, then select OK.

			Properties
🔄 AMCap			Video Proc Amp Camera Control
File Devices	Options Capture View Help   Volume Program Video Device   Audio Device Video Mixing Renderer 9	MPEG2 Flip Video Capture Filter Video Capture Pin Still Capture Pin	Video Proc Amp Camera Control
ImageMaster	USB 🔤: 🖄	00:00:00 0.0 28.8 💐	Gefault